



Packing your bike

Step 1

Get your hands on a bicycle; preferably your own.



Step 2

Loosen the handle bars at the stem so that you can fold them down.



Step 3

Turn the handle bars towards the right hand side (viewed from above) at right angles.

Step 4

Twist the handle bars so that the drops fold down and around the top tube of your frame.

N.B. If you own a mountain bike you may need to remove your handle bars in order to fit the bicycle into the case.

N.B. If your frame exceeds 64cm you may need to lower your saddle.



Step 5

Mark your saddle height and loosen the securing bolt.

Step 6

Tighten the seat pillar bolt after you have lowered your saddle to keep it secure in the lowered position.

N.B. Do not remove your pedals.

Step 7

Move chain across onto large chainring.



Step 8

Take off both wheels and if you have wheel bags, place them in the wheel bags.

Step 9

Turn the frame upside down and place it into the BikeSafe®.



Step 10

If you have a chain cover place it over the large chain ring, right hand side pedal and the rear derailleur and pull the toggle tight.



Step 11

Carefully place the front wheel next to the frame under the chain ring and securely under the pedal.

Then


Put the back wheel on the other side of the box (opposite the brake levers) behind the front forks, under the left hand side pedal and with the cluster within the frame triangle.

N.B. If you do not have wheel bags, place supplied foam square between your frame and wheel.



Step 12

Place the webbing strap between the front forks, over the bottom bracket and between the rear brake pads and secure clip.

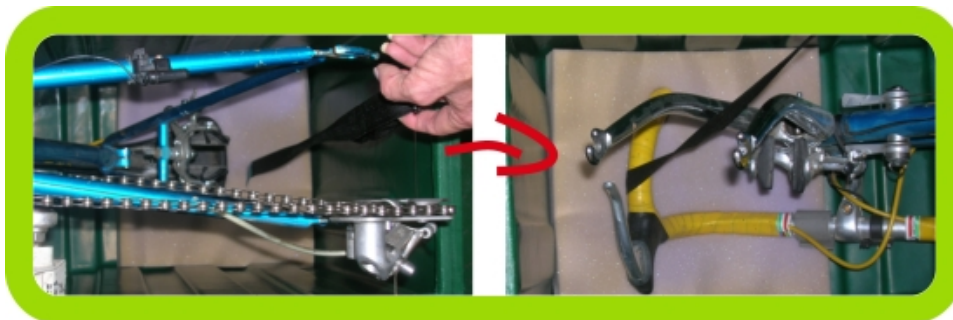

Step 13

Press down firmly on the bottom bracket and at the same time pull the strap tight so that the saddle and handle bars are pulled firmly into the foam on the floor of the case.



Step 14

If the plastic clip is touching the frame of your bike when the strap is tightened, simply turn your frame through 180°.




Step 15

To put the lid onto the base of the box turn it about 30° clockwise and carefully lower it over the pedals and rear derailleur before lining it up with the base and sliding it forward to line up with the four combination locks.



Step 16

Set your combination locks to your favourite three digit code (see attached instructions) and close them firmly.

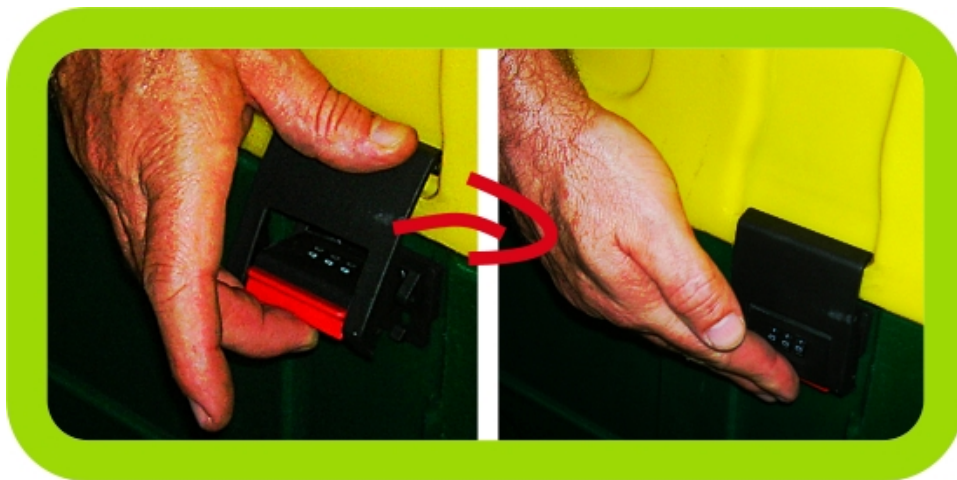

Step 17

Your bike is now ready for transport.



Step 18

When opening the BikeSafe®, do not forget to turn the lid clockwise by about 30° to release the pedals and derailleur before lifting the lid.



